

CARE AND MAINTENANCE cont.

- Rubber tyres can leave marks on some surfaces. The tyres can react with some surfaces (vinyl floor coverings, carpets etc.) and cause stains. Always stand the stroller on a protective surface indoors.
- Routinely clean the metal parts with a damp cloth & then dry immediately.
- Fabrics should be cleaned using lukewarm water and a mild washing detergent. Do not wash in the washing machine.

WARRANTY

Babystyle UK Ltd provides a warranty in support of the retailer from whom you purchased this product. The warranty is effective for 6 months from the date of purchase for the original purchaser/owner. Proof of purchase will (at the discretion of Babystyle UK Ltd) be required in order for your retailer to claim on the warranty. The warranty excludes any fault caused by misuse, damage or neglect. It is the user's responsibility to undertake routine inspection and maintenance of the vehicle in order to avoid damage to the vehicle and/or injury to the child. The vehicle is returned to the retailer at the owners' expense in order to ascertain if a claim under the warranty is justified. Please carefully read the instructions on how to look after your stroller. This does not affect your statutory rights.

BabyStyle[®]

www.babystyle.co.uk

Babystyle UK Limited
36 Charles Street
Sileby
Leicestershire
LE12 7RJ
UNITED KINGDOM

This instruction manual © Babystyle UK Limited 2006
All rights reserved. LUX S3D 0950/110806

**LUX
S3D**

Instruction manual



IMPORTANT – KEEP FOR FUTURE REFERENCE

Please read these instructions carefully before using your new Pram / Travel system / Pushchair. Keep this manual in a safe place for future reference.

BabyStyle[®]

CONTENTS

Important Safety Information	3
Primary features	4
Opening the chassis	4
Fitting the rear wheels	4
Connecting the linked brake bar	5
Fitting the front wheels	5
Operating the swivel wheels	5
Folding the chassis	5
Adjusting the handle height	5
Using the brake	5
Fitting the pram body	6
Removing the pram body	6
Fitting the seat unit facing backwards	7
Fitting the seat unit facing forwards	7
Fitting the seat unit to the chassis	8
Removing the seat unit from the chassis	8
Fitting the Britax car seat & adaptor	8
Correct position for the car seat adaptor	9
Using the safety harness	9
Fitting & Removing the hood	9
Adjusting the footrest	10
Fitting the bed extension	10
Adjusting the seat backrest	10
Pram body sit-up board	11
Fitting the apron	11
Care and maintenance	11/12
Warranty	12

PRAM BODY SIT-UP BOARD

The pram body is equipped with a sit-up board. The sit-up board is for use as a backrest when your child is ready to sit up. The sit-up board can be erected/reclined to three positions or folded into the sleeping position. To erect the sit-up board lift the top of the sit-up board and locate the support bar (at the back of the sit-up board) in the desired position. The support bar locates in the plastic housings on the inside base of the pram body. To recline the sit-up board; release the support bar and recline the sit-up board backrest.

FITTING THE SEAT UNIT APRON

To fit the apron place the bottom elasticated part of the apron over and underneath the footrest and lay the top part of the apron over the bumper bar, fasten the press-studs on the apron to the corresponding press-studs on the hood. To remove; release the press-studs with care and take the apron away.


CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts & fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. Should you intend to use the pushchair during the winter, by the sea or off-road; it is important to clean thoroughly & dry the vehicle after use. Salt from the ocean or from roads will corrode metal parts if not removed after use.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the pushchair is damaged contact your local Babystyle retailer immediately without using the pushchair.
- Do not expose your pushchair to excessive sunlight for extensive periods of time.
- Take care not to tear the fabrics while transporting the pushchair.
- Petroleum jelly is suitable to use as a lubricant for moving parts.
- Ensure that zips are either fully open or fully closed or they may be damaged.
- Always use the rain cover in inclement weather.
- Do not place items on the hood/canopy, it may damage the vehicle and/or render it unsafe.

ADJUSTING THE FOOTREST

To adjust the footrest, press the button at the top of the footrest and lift or lower the footrest to the desired position.

 
Picture 6

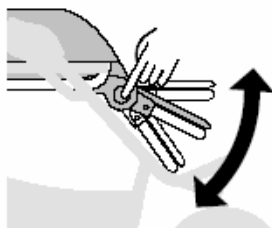

FITTING THE BED EXTENSION

To attach the bed extension, remove the front bar, set the footrest to the horizontal position (see adjusting the footrest) and push the bed extension brackets into the plastic housing until it clicks. To remove the bed extension, depress the plastic latched at the bottom of the bracket and pull upwards simultaneously.

 
Picture 7

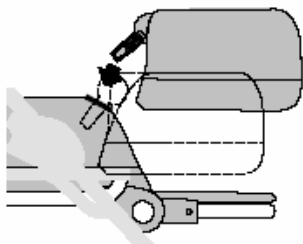

ADJUSTING THE SEAT BACKREST

To adjust the position of the seat unit seat backrest, support the backrest in one hand and press the button, while holding the button in reposition the backrest as desired and release the button. The backrest has 5 usable positions.

 Picture 8

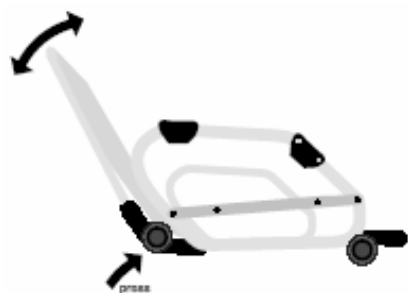

IMPORTANT SAFETY INFORMATION


1. **WARNING:** A child's safety is your responsibility
2. **WARNING:** Children should never be left unattended in this vehicle.
3. It is important that any person intending to use this vehicle fully understands the instructions.
4. **WARNING:** Children should be harnessed in this vehicle at all times. Use the five point harness that is provided or one that complies with BS 6684. Make sure the harness is securely fastened to the "D-rings" situated on the integral harness either side of the seat. Adjust the harness to its correct position with the use of the adjustable straps.
5. **WARNING:** Children should always be kept clear of moving parts while making adjustments to the vehicle.
6. **Never** overload the vehicle; the weight limit for the shopping tray is **3 kg**. Always place articles in the centre of the tray provided. Any load attached to the handle will adversely affect the stability of the vehicle.
7. **WARNING:** Incorrect assembly, folding or use of this vehicle may cause damage and affect the safety of the vehicle.
8. It may be unsafe to use accessories (e.g. child seats, bag-hooks, rain covers etc.) other than those approved by the manufacturer.
9. **WARNING: Never leave the vehicle without first engaging the parking device. Avoid uphill or downhill parking.**
10. Avoid using the vehicle on steps, stairs or escalators as it may be dangerous to your child/children.
11. Check on a regular basis to make sure that all essential components & locking devices are functioning correctly.
12. When the pram body is used, the depth from the top of the mattress to the top of the side of the body (or at any position within 300mm of the harness attachment points), should not be reduced to less than 140mm when the mattress is in position. Any mattress purchased should conform to BS1877: part 10.
13. Do not use replacement parts other than those supplied by the manufacturer or distributor.
14. Never use this vehicle as a permanent bed for your child / children.

BS 7409: 1996 label

WARNING: A CHILD'S SAFETY IS YOUR RESPONSIBILITY.

Children should be harnessed in at all times and should never be left unattended. The child should be clear of moving parts while making adjustments. This vehicle requires regular maintenance by the user. Overloading, incorrect folding and the use of non-approved accessories may damage or break this vehicle. Read the manufacturer's instructions.

 PRIMARY FEATURES

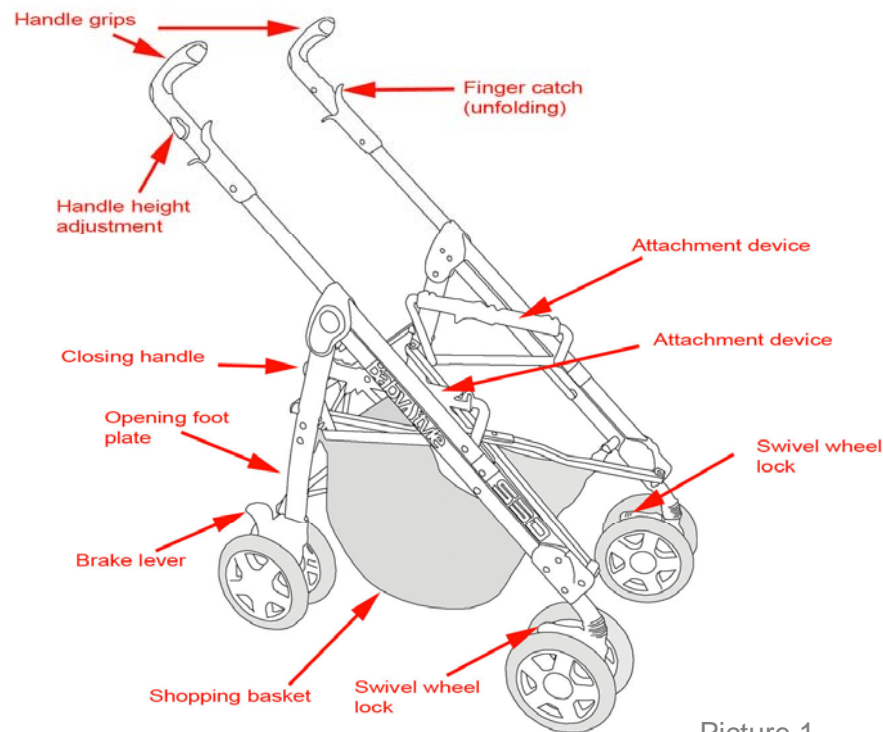

Picture 1

OPENING THE CHASSIS


Remove any packing and place out of the reach of children. Pull up on both finger catches found just below the handle grips and lift the pushchair by the handle grips, the frame will start to open. Push down gently with your foot on the opening foot plate and tilt the handle grips forwards.

FITTING THE REAR WHEELS

Push each rear wheel unit onto each rear leg of the pushchair until it clicks into position. The rear wheels will only click into position if the brake mechanism is facing the rear of the pushchair. Check the wheel units are secure by trying to pull them off.

CORRECT POSITION FOR CAR SEAT ADAPTOR

 Picture 5

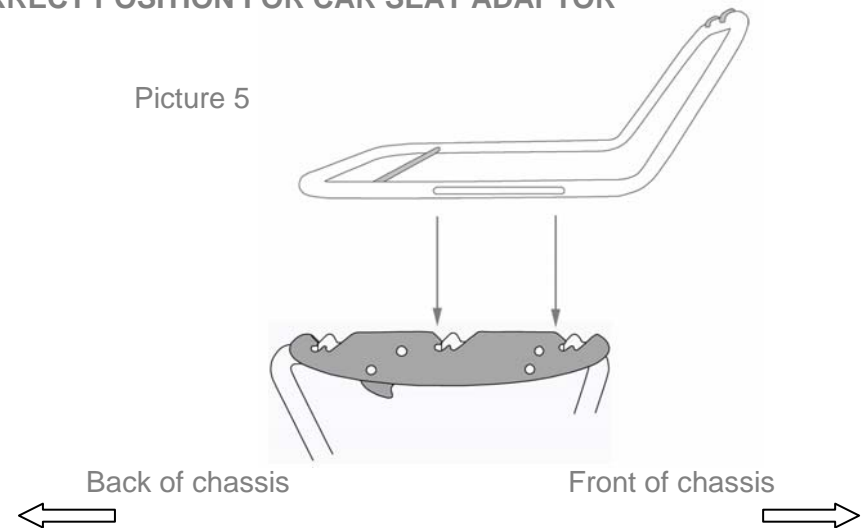

USING THE SAFETY HARNESS

Always apply the parking brake before placing your child in the vehicle. The safety harness has two shoulder straps, two waist belts and a crotch strap. Place the two shoulder straps over the child's shoulders and the waist belts around the child's waist. The crotch strap should be placed between the child's legs. The waist belts & shoulder straps should be clipped into the buckle at the end of the crotch strap. The harness can be adjusted to suit your child by sliding the adjusters along the shoulder straps and waist belts. To release the safety harness, push the buttons on the centre buckle. D-rings for attaching a separate harness conforming to BS 6684 can be found attached to the integral harness at the base of the waist straps. **ALWAYS USE THE HARNESS CROTCH STRAP IN COMBINATION WITH THE WAIST BELT.**

ALWAYS USE THE SAFETY HARNESS

FITTING & REMOVING THE HOOD (SEAT UNIT & PRAM BODY)

To attach or remove the hood; push the hood bracket into the plastic housing until it locks into position. To remove the hood, depress the plastic latch at the bottom of the bracket and pull upwards. NOTE: some models are supplied (depending on style) with a valance that fits via a zip to the rear bottom edge of the hood. The valance is designed for use with the hood in conjunction with the seat unit.

FITTING THE SEAT UNIT TO THE CHASSIS (ATTACHMENT DEVICE)

The seat unit can be fitted to the chassis to face either forwards or backwards. To fit the seat unit to the chassis, locate the retaining bars found on the seat unit sides on the attachment device in the correct position (see pictures 3 & 4) and gently push the seat unit until it clicks into position. Check that the seat unit is securely attached by trying to lift the seat unit from the chassis. **DO NOT ATTEMPT TO FIT THE SEAT UNIT WHILE IT IS OCCUPIED.**

NOTE: Backwards facing seat position. If the seat unit is fitted in the wrong position the footrest will not fold down.

REMOVING THE SEAT UNIT FROM THE CHASSIS.

The chassis cannot be folded with the seat unit fitted. To remove the seat unit from the chassis release the attachment devices on either side of the chassis. Pull the triggers at the bottom of the attachment device until they stop and remain in position. When both triggers have been released the seat unit can be lifted clear of the chassis. **DO NOT ATTEMPT TO FIT OR REMOVE THE SEAT UNIT WHILE IT IS OCCUPIED. CHILDREN SHOULD BE CLEAR OF MOVING PARTS WHILE MAKING ADJUSTMENTS.**

FITTING THE BRITAX CAR SEAT & ADAPTOR

To fit the car seat to the chassis, first fit the adaptor. Locate the retaining bars on the car seat adaptor on the attachment device in the correct position (see picture 5) and gently push the adaptor until it clicks into position. Check that the adaptor is securely attached by trying to fit it from the chassis. Fit the car seat to the adaptor by locating the two diagonal slots in the bottom of the car seat in the thin metal bar at the front of the adaptor. Allow the back of the car seat to rest against the back part of the adaptor. At the back of the car seat there is a hinged clip. Fold the clip over the adaptor bar and clip and lock it into position.

Check that the car seat is securely fitted to the adaptor by trying to lift the car seat from the chassis and adaptor.

See diagram facing page.

CONNECTING THE LINKED BRAKE BAR

Connect the linked brake to the rear wheel units by pushing the brake levers into the corresponding hole on the rear wheel units. The brake levers will lock into position. Push the brake levers down and engage the parking brake to ensure it is working correctly.

FITTING THE FRONT WHEELS

Remove any packing & position the front wheel unit at the bottom of the front leg of the pushchair. Push the wheel unit onto the pushchair leg until it clicks into position. Check the wheel units are secure by trying to pull them off.

OPERATING THE SWIVEL FRONT WHEELS

The front wheels can be used in swivel wheel or fixed wheel mode. The operating lever is situated between the two wheels of each front wheel unit. To switch between swivel or fixed wheel mode; push the lever down for swivel wheel mode, pull the lever up for fixed wheel mode.

FOLDING THE CHASSIS

The chassis can only be folded when the seat unit/pram body or car seat have been removed.

Apply the pushchair parking brake and lock the front wheels. Pull both finger catches and hold them in then push the handle grips downwards until the frame starts to fold. Release the finger catches and grip the closing handle at the back of the frame. Pull it upwards until the pushchair is fully folded. Ensure the chassis is locked by pushing the parallel tubes together.

ADJUSTING THE HANDLE HEIGHT

The handle height is adjustable to two positions. To adjust the handle height, press in the button on the handle grip shaft, and slide up/down the handle. The handle will click into one of the pre-set positions.

USING THE BRAKE

To engage the brake, press down the brake lever between each set of rear wheels with your foot. Check that the brake is fully engaged on both sets of wheels. To release the brake, with your foot lift up the brake lever until the wheels move freely.


NEVER LEAVE THE PUSHCHAIR WITHOUT FIRST ENGAGING THE BRAKE.

FITTING THE PRAM BODY TO THE CHASSIS

To fit the pram body to the attachment device on the chassis, locate the retaining bars on either side of the pram body in the forwardmost position of the attachment device (Picture 1). Gently push the pram body down until it clicks into position. Check that the pram body is securely attached by trying to lift the pram body from the chassis.

CORRECT POSITION FOR PRAM BODY

 Picture 2

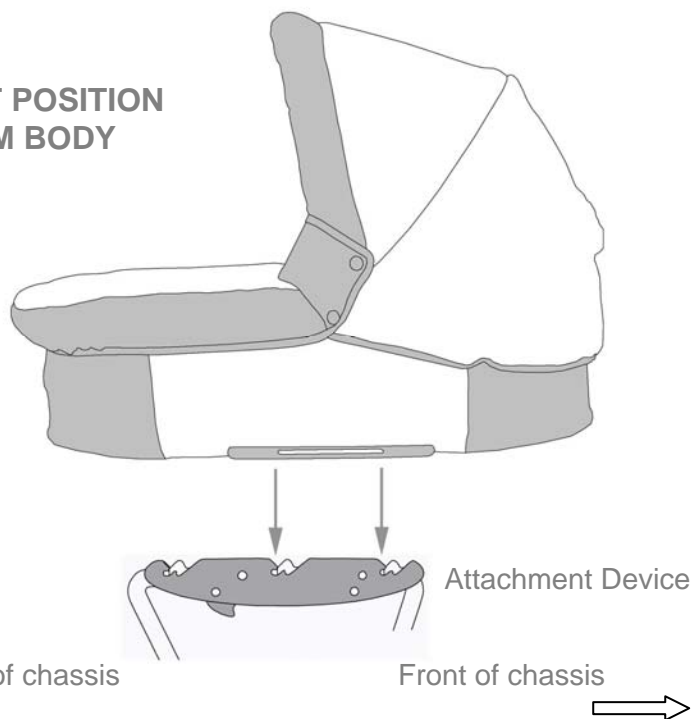


REMOVING THE PRAM BODY FROM THE CHASSIS

To remove the pram body from the chassis release the attachment devices on either side of the chassis. Pull the triggers at the bottom of the attachment device until they stop and remain in position. When both triggers have been released, the pram body can be lifted clear of the chassis. CHILDREN SHOULD BE CLEAR OF MOVING PARTS WHILE MAKING ADJUSTMENTS.

FITTING THE SEAT UNIT FACING BACKWARDS

 Picture 3

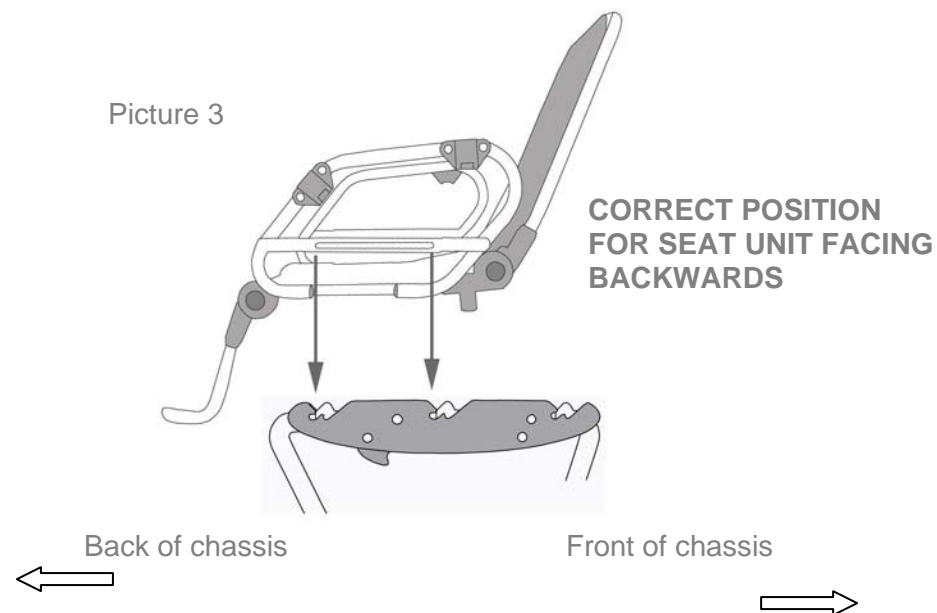

FITTING THE SEAT UNIT FACING FORWARDS

CORRECT POSITION FOR SEAT UNIT FACING FORWARDS

Picture 4

